

Adjust-A-Rest®

SUPER QUIET

AIR PUMP CONTROL OPERATION

 
 


Adjust-A-Rest®: 2 Wand, 4 Function (Up/Down/Memory/Bed Fill), Dual System

- 1) Initial Setup Fill & Bed Made Mode:** Press and release Bed Fill key. Shortly after releasing Bed Fill key the pump will begin filling the air chamber. Factory permanent setting is 50 mm/Hg. Repeat step one for the other chamber if the system is dual. Only one chamber may be filled at a time.
- 2) Manual Mode:** Soft/Deflate or Firm/Inflate keys may be pressed to manually set desired sleep preference.
- 3) To Reset Memory For Sleep Preference:** Factory preset is 50 mm/Hg. Press Soft/Deflate or Firm/Inflate to desired level. Press Memory key and hold Memory key until LED readout shows set point for sleep preference. Once Memory is set, to return to set preference, press and release Memory key twice and pump will adjust chamber accordingly shortly after second time key is released. Repeat step three for other chamber if system is dual.
- 4)** Pump will stop operating at Memory set point or at 50 mm/Hg or if "hi" is displayed on readout or if pump has been running continuously for 10 minutes.
- 5) Energy Efficient Mode:** Display lights to turn off 5 minutes after use and relight after any keys are pushed. LED's operate independently - so may not shut off simultaneously.


PLEASE NOTE: While filling chambers it is normal for your Adjust-A-Rest® pump to turn off and on intermittently as it is allowing pressure to balance between pump and chambers to ensure accurate support set point readings.

When placing the pump under your bed, be sure to have the ports facing the wall or facing away from the head of the bed after placing the air cores into the cavity of your new sleep system. Looking from the foot of your bed, the right side air core will be attached to the right port of your pump and the left side air core to the left port.

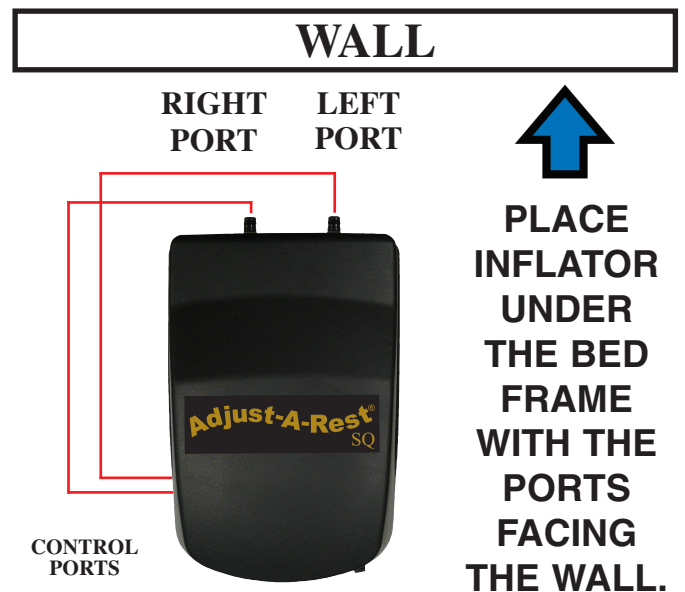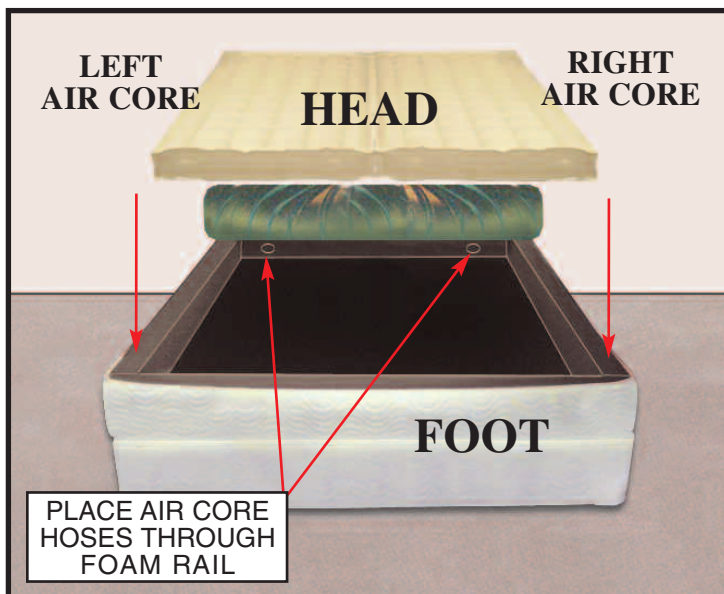

TIPS

 - If putting the pump on hardwood floors, place a towel under it to reduce vibration and noise.
- Place wired control in a convenient place for access to both people.
- Uncurl air core hose to ensure proper connection to air inflator.
- Plug into surge protector for added protection.

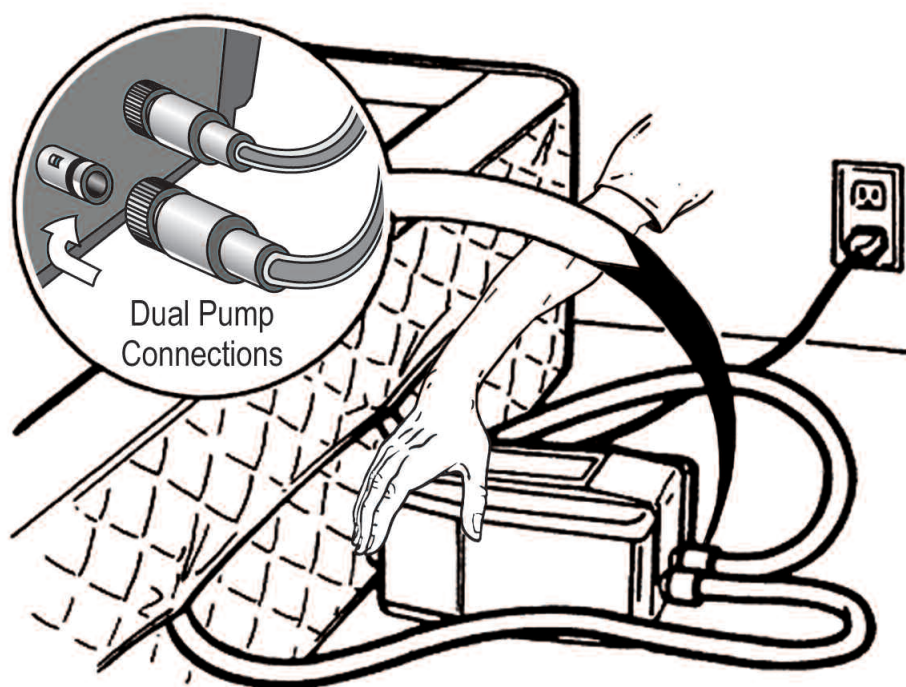

Firmly push Cam-Lock on to Pump Connector and turn swivel collar clockwise to lock & counter clockwise to unlock. You will feel Cam-Lock click into place once locked.

*** DO NOT OVER TIGHTEN ***

*** KEEP THIS WITH YOUR MATTRESS ***