Oak Land Furniture Inc.

LA JOLLA PIER WALL ASSEMBLY INSTRUCTIONS

Parts List

- A — Light Bridge
- B — Left & Right Piers
- C — Mirrors: 3-King 2-Queen
- D — Dividers: 2-King 1-Queen
- E — Headboard

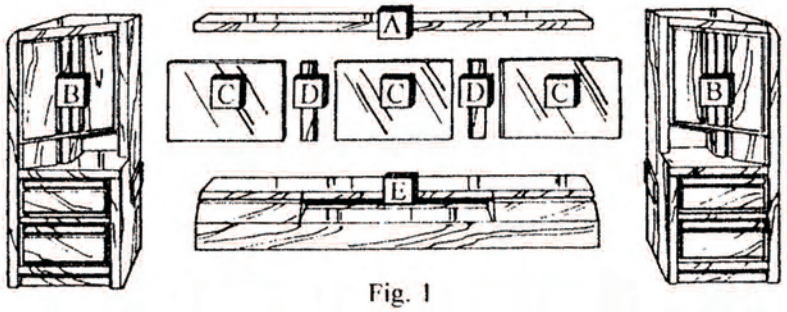

Fig. 1

Caution:
Mirror edges may be sharp. Use protective gloves.

Standard Hardware:



2-Long Wood Screws

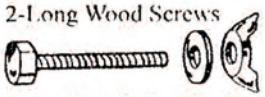

4-Carriage Bolts, Washers & Wing Nuts

1. Place pier cabinets on either side of bed 82" apart (64" for Q).

2. Position headboard tightly between piers in final location on floor. Leave space for lamp chords and plugs to slide behind wall system.

3. Rest headboard on top of blocks on pier side. Slot in mirror support should protrude behind piers so mirrors can slide freely behind cabinets. Mount headboard by running long wood screws through inside walls, behind front pillow stop, to piers (Fig. 2).

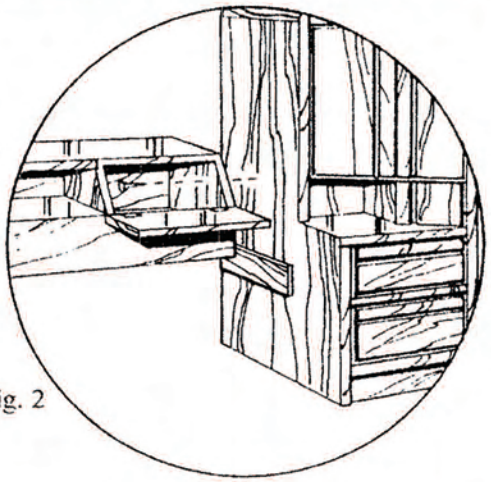

Fig. 2

4. Attach light bridge with carriage bolts through holes in upper pier cabinets (Fig. 3). Do not tighten wing nuts until mirrors are installed.

5. Install mirrors by inserting top up into slot on light bridge, then swivel bottom to drop into slot in mirror support on headboard. Slide side mirrors a few inches behind pier cabinets to allow hand space for installing center mirror.

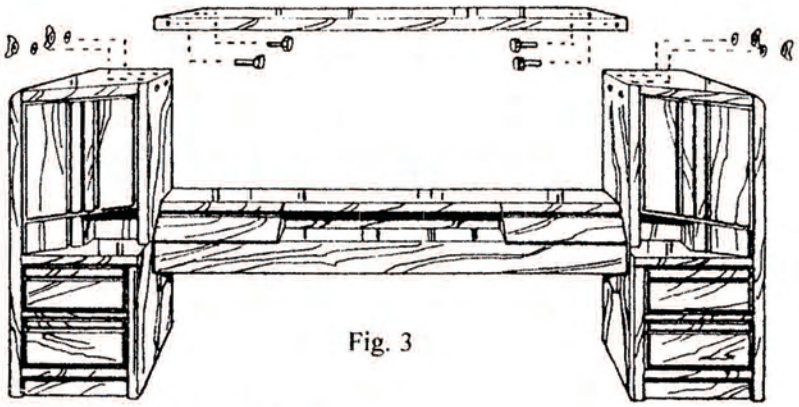

Fig. 3

6. Install dividers by sliding mirrors into slots on sides (Fig. 4). Center mirrors and dividers, then tighten carriage bolts and wing nuts securing light bridge to piers.

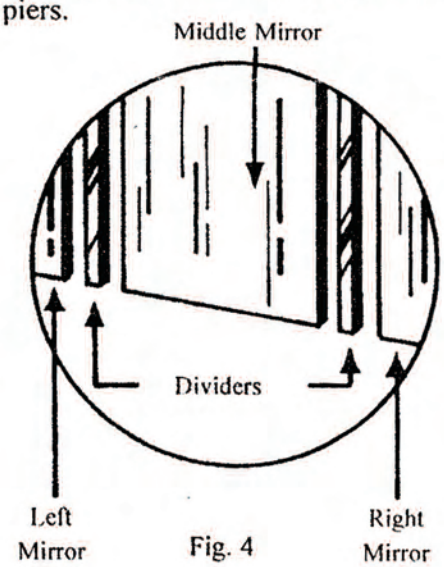
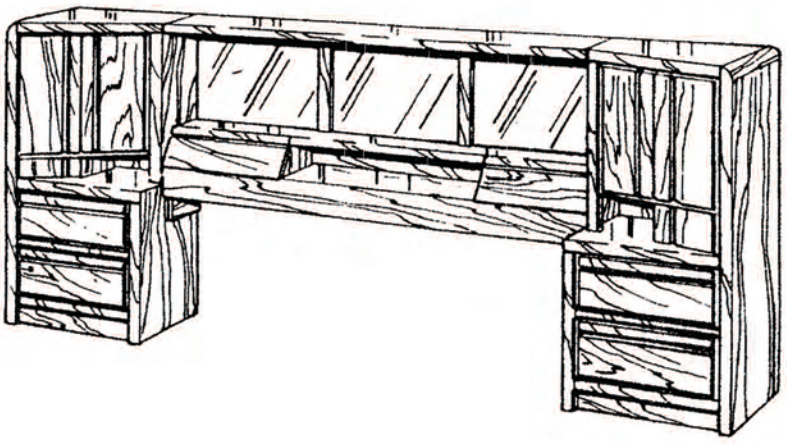
Fig. 4