





Oak Land Furniture Inc.

MARATHON WALL UNIT ASSEMBLY INSTRUCTIONS


1. Place pier cabinets on either side of bed 82" apart (63" for Q).

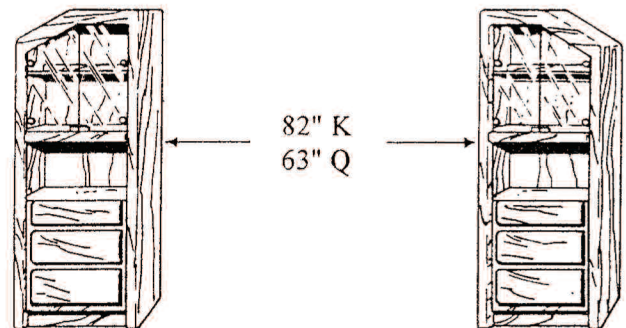


2. Screw the light bridge struts to each pier cabinet. Line the hole in the struts with the hole in the piers. The strut should be mounted with the wider side facing out. (See drawing).

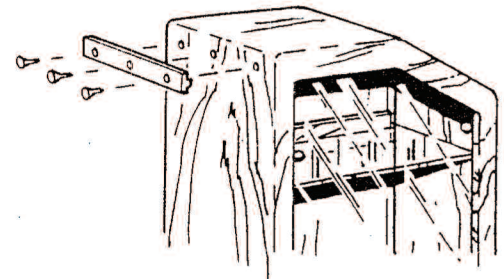




3. With a helper slide the light bridge onto the struts that you mounted onto the pier cabinets. The bridge should be flush with the back of the piers when completely installed.

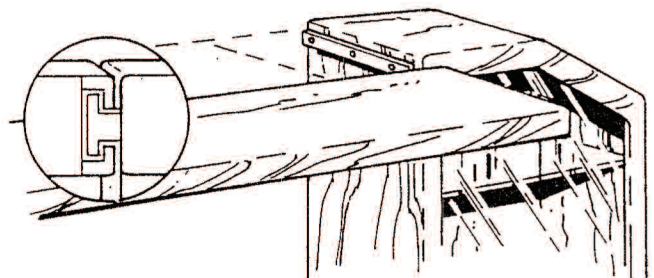

4. Install the headboard between the pier cabinets. Front molding must be flush with molding on the pier cabinets. Connect the electrical panel before installing the wall mirrors as shown.

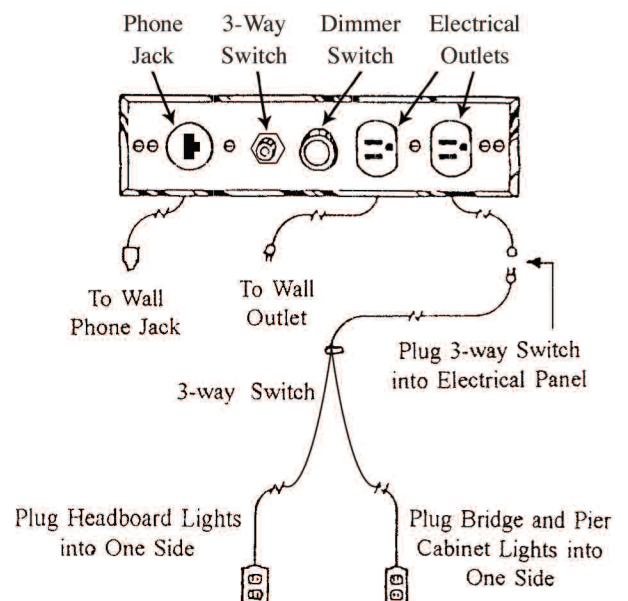


5. The wall mirrors are installed from the front of the wall. Install the two side mirrors first by lifting each up into the groove in the light bridge, then down into the groove on the headboard. Slide each mirror slightly to the sides to allow room for the center mirror.

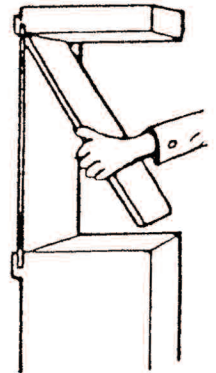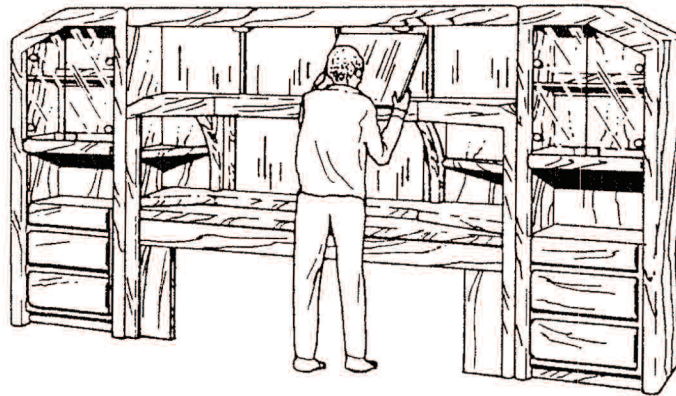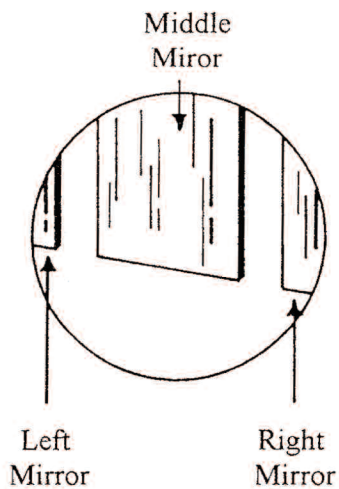

Lift Mirror into Place

6. Next take out the middle drawer of each pier cabinet. Reaching into the opening (using locking screws provided) put 2 screws through the inside wall of the pier cabinet into the headboard. Repeat on the other side. (This braces the piers to the headboard and prevents movement).

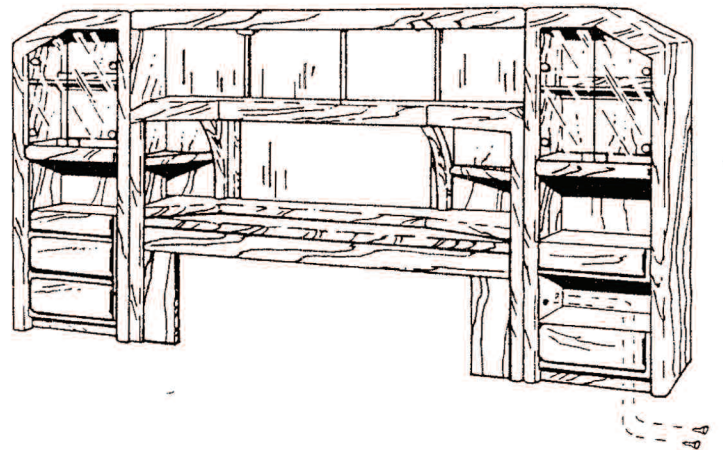

1 1/2" Locking Screws