Oak Land Company

MATRIX WALL UNIT ASSEMBLY INSTRUCTIONS

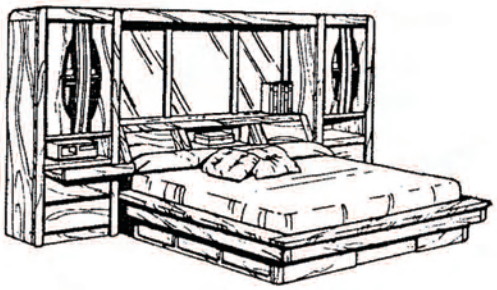

PARTS LIST INCLUDED

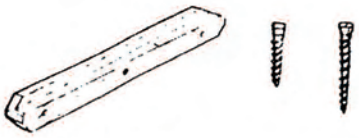

(2) Pre-drilled light bridge struts

(10) 1½" Screws
(2) 2½" Screws

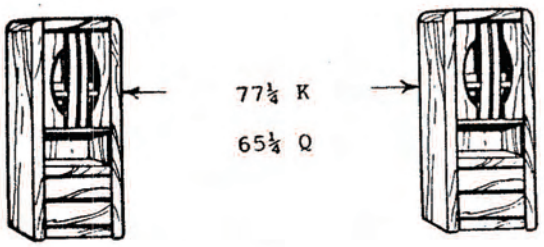

1. Place pier cabinets on either side of the room 77¼" apart. (65¼" for queen)

2. ... pre-drilled holes on the top inner side of each pier cabinet. Using (6) 1½" screws provided, install light bridge struts to side of pier cabinet. (As shown) Line the holes in the struts with the holes in the piers. The strut should be mounted with the lip facing up.

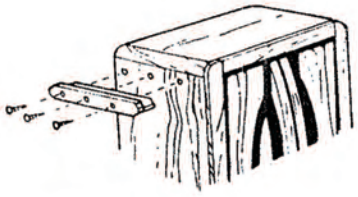

3. With a helper, slide the light bridge onto the struts that you mounted onto the pier cabinets. The bridge should be flush with the back of the piers when completely installed. (Screws are installed in step 10)

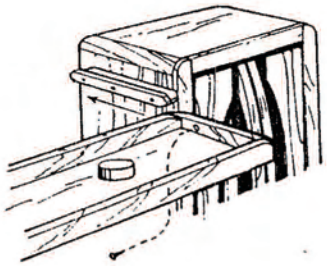

4. Install the headboard between the pier cabinets and line them up tight to the cabinets. Front molding on the pier cabinet should line up the the face frame of the headboard. Install on/off switch in headboard (as shown). A pre-drilled hole is provided in the middle section of the headboard.

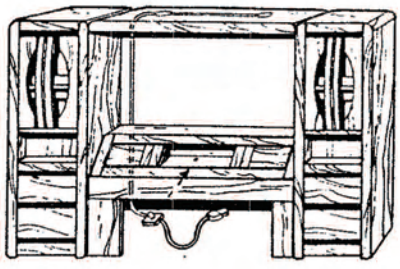

5. Connect all wiring as follows: Plug phone cord from control panel into the nearest wall phone jack. Plug large power cord from control panel into the nearest wall outlet. Plug extension from on/off swith into the 3-way outlet from control panel. Plug each pier cabinet extension into remaining outlets in the 3-way outlet from control panel. Check operations of all electrical devices before proceeding to step 6 since all wiring will be concealed behind the light bridge mirrors.

6. Place left and right mirror rails (A&B) on the top of the headboard and tight against the pier cabinet. (as shown) Note: Left and right mirror rails have a curve cut on the bottom.

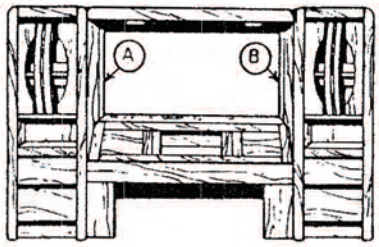

7. The wall mirrors are installed from in front of the headboard. Install the two side mirrors first by lifting them up into the groove in the light bridge, then down into the groove in the headboard. Slide each mirror to the side and into the slot on the mirror rail, (A on the left and B on the right).

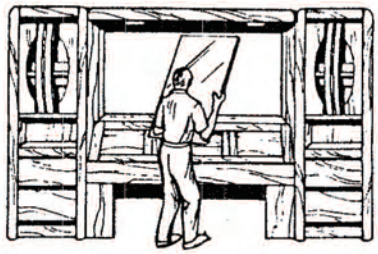

8. Next, install the remaining mirror rails C & D and slide slot in side of mirror rail over the mirror edge. Horizontal opening for center mirror should be 23½" minimum for King and 20' for Queen.

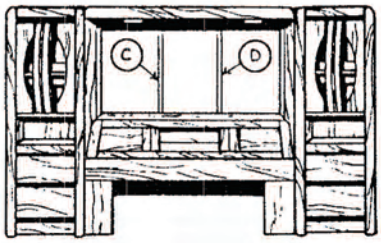

9. Install center mirror as explained in step 7. Then adjust mirror rails C and D toward center mirror and enter edge of center mirror into slots of mirror rails. Then adjust right and left mirrors toward center mirror until centered visually and no gaps are left.

10. Adjust the bridge gently toward you until mirrors are flush to the back of each pier. Next using 2½" screws provided, secure the light bridge to the pier cabinets (as shown in illustration #3). Place the screw through the pre-drilled hole in the light bridge into the pier cabinets. One one each end of bridge.

11. Next adjust the headboard up to tighten the mirrors to the bridge. Inside the bottom of the headboard are four adjustable legs. With a 9/16" or 14 mm open end wrench, raise the headboard up evenly until mirrors are tight.

12. Next take out the top drawer of each pier cabinet. Reach into the opening (using two 1½" screws provided) and put screws through the inside wall of the pier cabinet and into the headboard. Repeat on the other side. This braces the pier to the headboard and prevents movement.