





# Mission Creek Waterbed with Bookcase Headboard - Assembly Instructions

## 1. FRAME ASSEMBLY.

Attach brackets to side rails first. Slots attach to backboard & footboard.

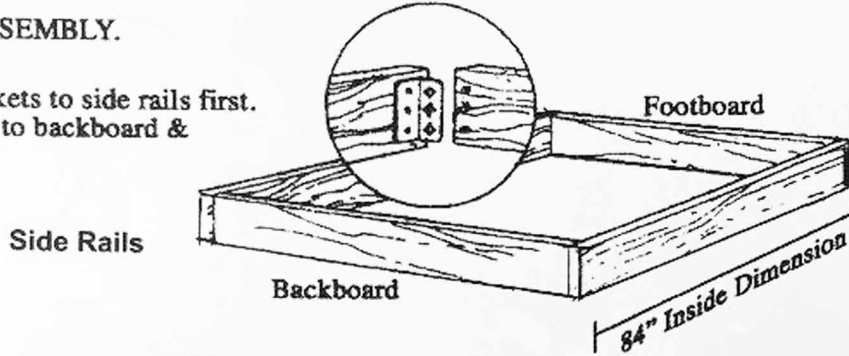

## 2. Attach Headboard to Headboard Booster with 1" Screws

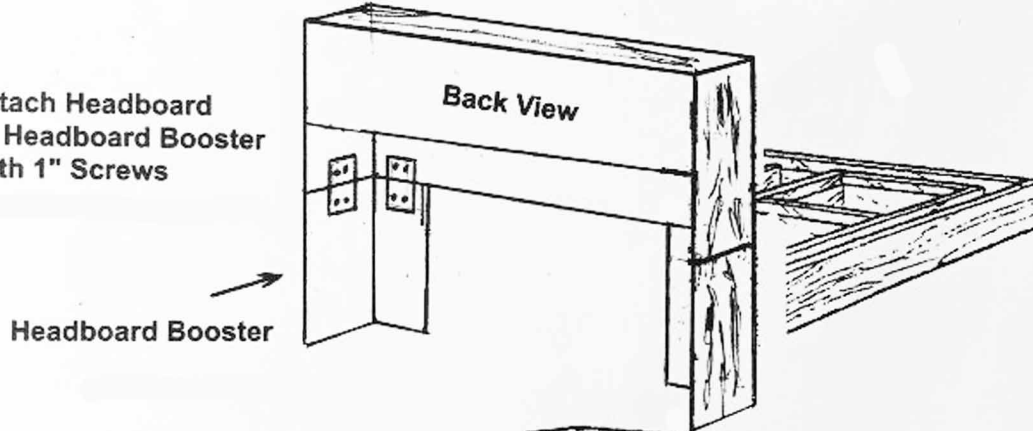

## 3. DECKING & "L" BRACKET ASSEMBLY.

