


QUICK STARTUP

CONVERT-A-BED MODULE ASSEMBLY

Support Module fit into Top Enclosure Dish (see below)

1. Carefully remove all Bed components from cartons. Avoid use of knives and box cutters. Bed is assembled from bottom up.

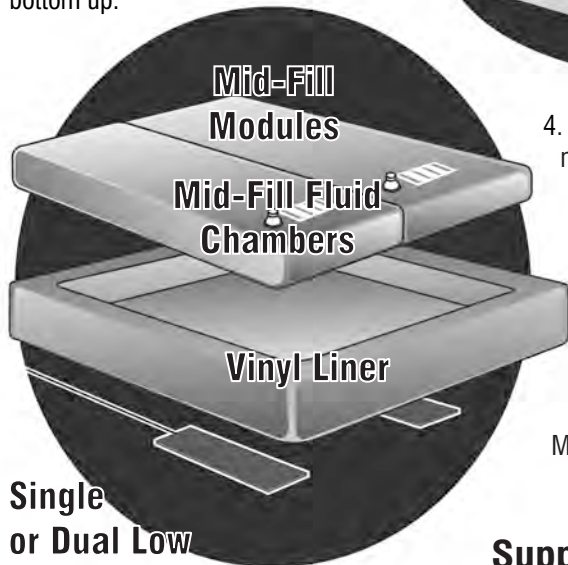


Single or Dual Low Watt Heaters (Max. 120 Watts Ea.)

2. If using optional foundation, place foundation on metal frame or legs.

3. All models: Place unzipped Top Enclosure on the foundation or platform and insert Interlocking Bolsters. Insert Head to Foot Bolster Rails A first. Side to Side Rails B are then inserted to form dish. If upside down or not completely unfolded Bolsters will not reach head to foot or side to side.


4. Midfill Fluid Waterbed Modules: Single or Dual Low Watt heaters (Maximum 120 Watts each) should be installed according to the manufacturers instructions. Vinyl Liner, required for Midfill Modules is then tucked around dish. Place Midfill fluid chamber (2 for dual systems) evenly distributed in dish and begin filling.

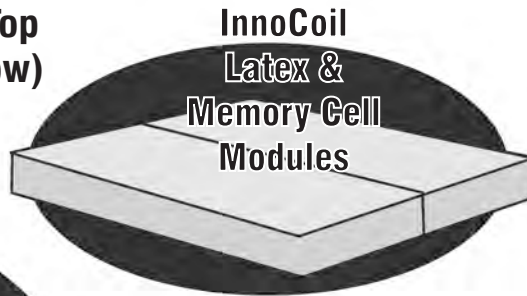


4. InnoCoil, Latex and Memory-Cell modules: Center modules left to right in Convert-A-Bed dish with Firm or Plush sides up accordingly. To readjust firmness, flip InnoCoil, Latex and Memory-Cell module from head to foot. Optional Vinyl Liner is not required for InnoCoil, Latex and Memory-Cell modules.

Support Module Top Enclosure Dish

Convert-A-Bed Advanced Edge Support System

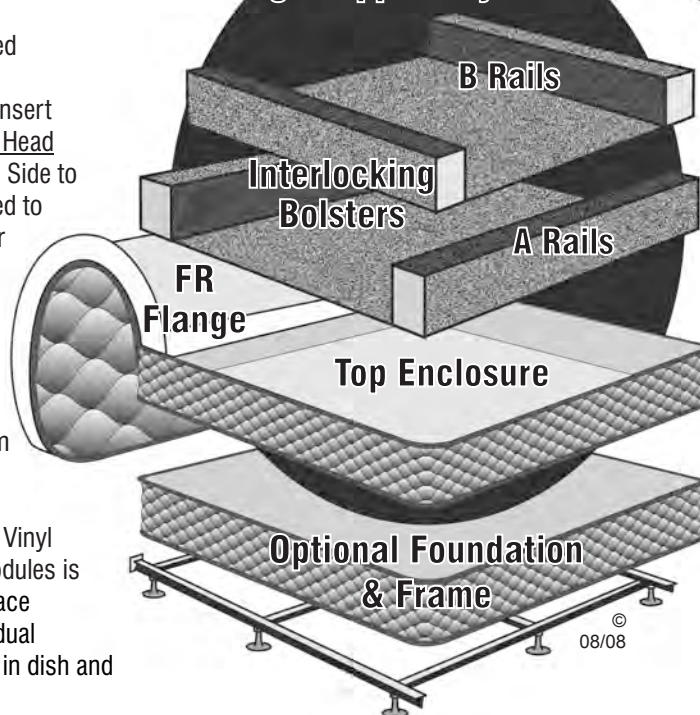

4. Cylinder Tube modules: Vinyl Liner, required for Tube Modules is then tucked around dish. Place Vinyl Cylinder Tubes in Vinyl Lined Dish and begin filling with proper adapters for faucet, hose and tubes. Optionally, tubes may be filled and drained in bath tub. Be sure to hold waveless tube insert securely when moving to avoid bunching. Comfort layer insulation is then laid over Cylinder Tubes. USE ONLY WITH CERTIFIED TUBE BED LOW WATT HEATER like Thermal Guardian 120 Watt heater for use with Tube Beds.

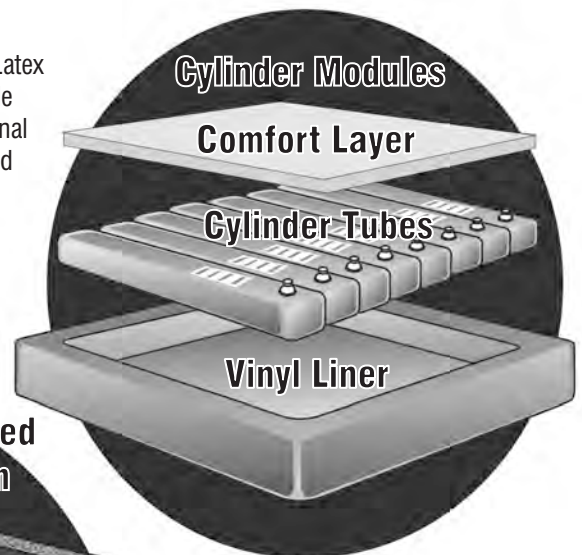

All Fluid Modules: Do not fill above height of vinyl liner. Burp noisy air bubbles out of Tubes, add water conditioner and cap tightly.

5. All models: Tuck F/R Flange behind zipper on Top Enclosure, Zip Top Enclosure securely around modules and cover with good quality mattress pad and bedding to protect your investment.

Enjoy your Convert-A-Bed sleep system for the best rest of your life.

Specialty Sleep Services

530 W. Elk Place
Denver, CO 80216
720-241-0648