


# SURE-LOCK™ AIR CHAMBER HOSE CONNECTOR UPGRADE INSTRUCTIONS


Steps to replace Barrel Fitting with the new Sure-Lock™ Connector

1

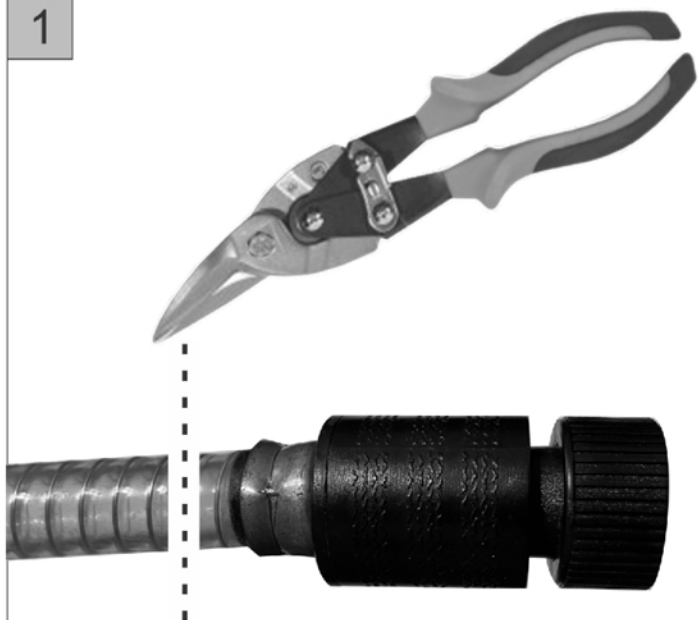


Cut off the old connector. Do not leave reinforcing wire exposed.

2

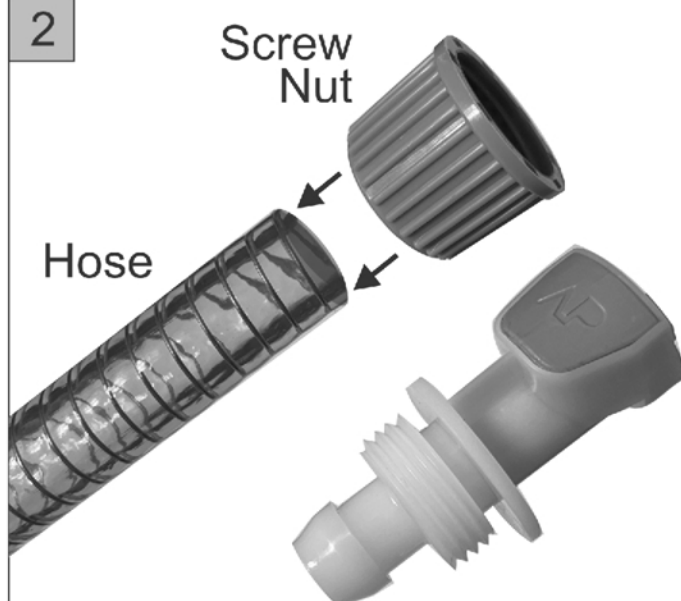


First slide threaded tightener Screw Nut on to Hose.

3

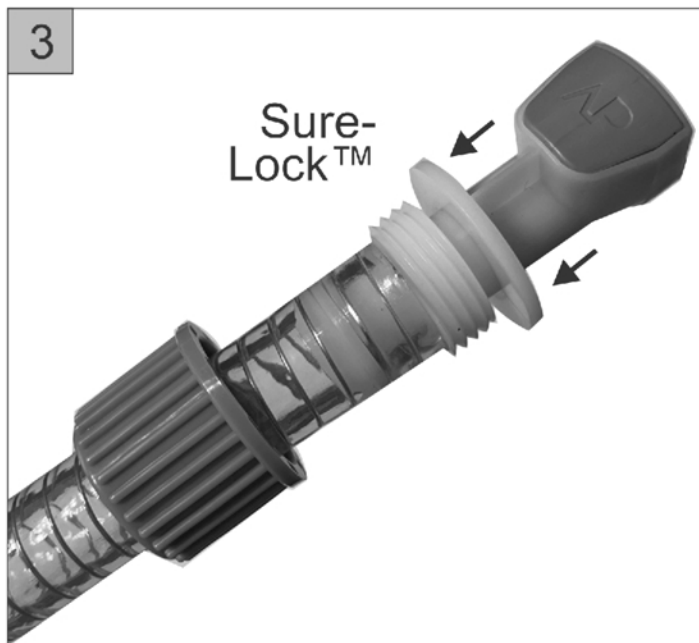

Insert Sure-Lock™ all the way in so hose meets screw threads.

4

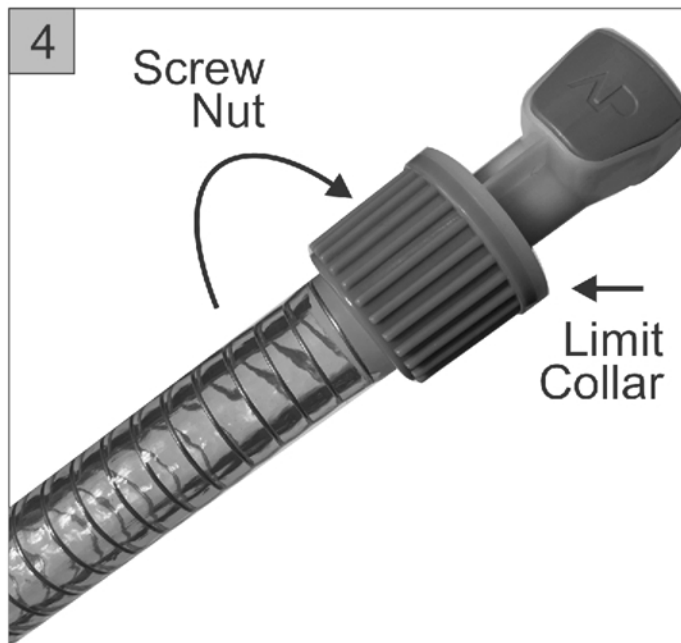

Screw Nut onto Sure-Lock™ all the way up to limit collar.