

Coronado Wall Assembly

Parts List:

- a** Light Bridge
- b** Left & Right Piers
- c** Mirrors: 3 - King
2 - Queen
- d** Dividers: 2 - King
1 - Queen
- e** Mirror Support
- f** Headboard
- g** Calif. King Panels
(king size only)


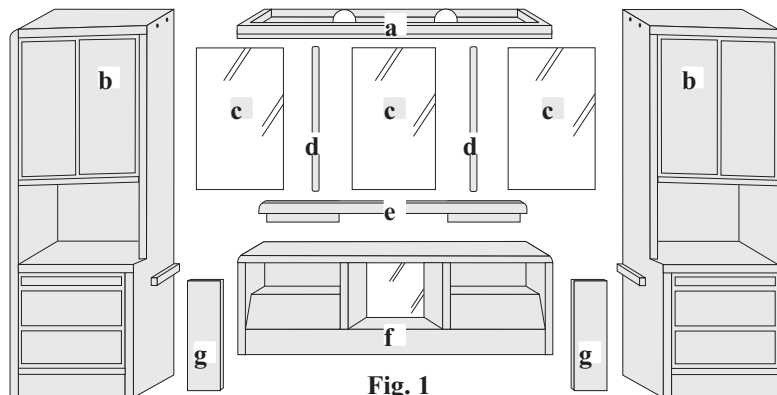


Fig. 1

Caution:


Mirror edges may be sharp,
use protective gloves

Standard Hardware:

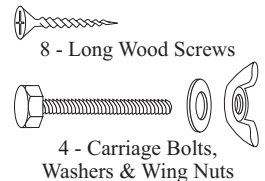


1. Attach Mirror Support to back of Headboard with 4 Long Wood Screws (Fig. 2).

Fig. 2 (back view)

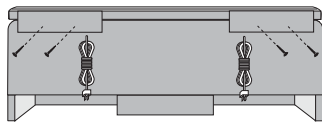

2. Position headboard tightly between piers in final location on floor. Leave space for lamp cords and plugs to slide

Fig. 4 (back view)

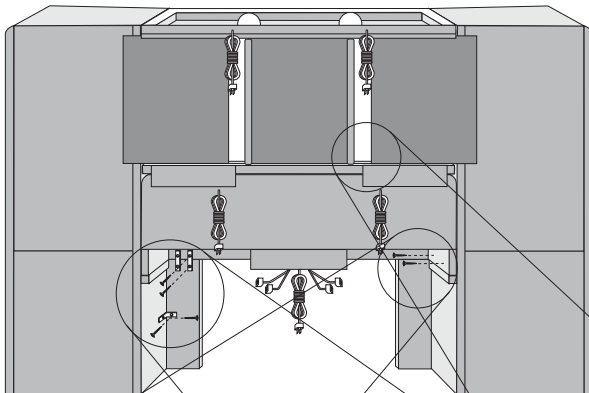


behind wall system. Number of lamps vary by model; La Jolla Wall - 2 and Coronado Wall - 4.

3. Rest Headboard on top of Blocks on Pier side. Slot in Mirror Support should protrude behind Piers so Mirrors can slide freely behind cabinets. Mount Headboard by running Long Wood Screws through inside walls, behind front Pillow Stop, to Piers (Fig. 5).

4. For California King, mount face Panels flush to bottom of headboard Pillow Stop with Straight Brackets and side of Piers with "L" Brackets (Fig. 6).

California King Hardware:

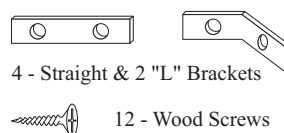

5. Attach Light Bridge with Carriage Bolts through holes upper in upper Pier

cabinets (Fig 3), do not tighten Wing Nuts until Mirrors installed.

6. If applicable, thread Light Bridge, Pier and Headboard lamp cords and plugs behind wall system and for attachment to appropriate power supply outlets.

7. Install Mirrors by inserting top up into slot on Light Bridge, then swivel bottom to drop into slot in Mirror Support on

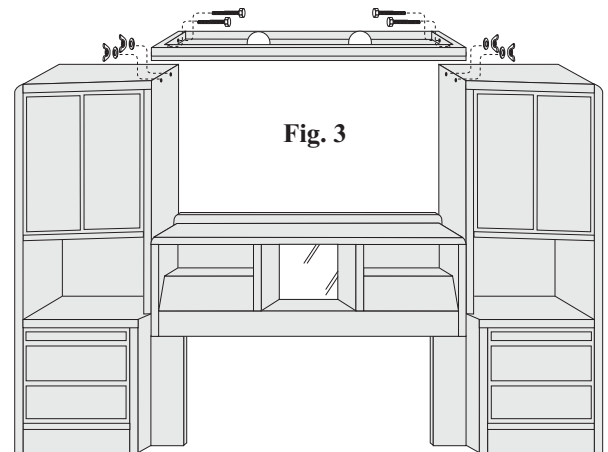


Fig. 3

Fig. 5

Fig. 6

Fig. 7

Headboard. Slide side mirrors a few inches behind Pier cabinets to allow hand space for installing center Mirror.

slots on sides (Fig. 7). Center mirrors and Dividers then tighten Carriage Bolts and Wing Nuts securing Light Bridge to Piers.

8. Install Dividers by sliding Mirrors into

Enjoy your Oak Wall from InnoMax.

