
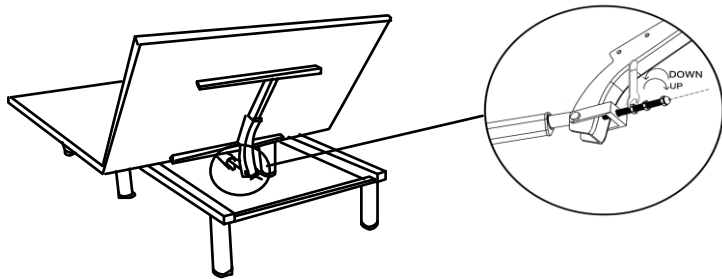


higher angled bed

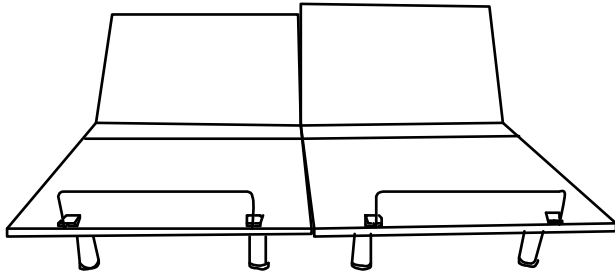

WHEN TWO BEDS DO NOT ALIGN:  
on the higher angled head of the two, use a 19mm wrench to turn the nuts on the new “LEVEL RIGHT” counterclockwise to adjust the angle until the higher angle bed match the level of the lower angle bed and lock the nut with the reinforce nuts.

The two head are now aligned.

## UpperFlex Adjustable Base QH Wireless



### OWNER'S MANUAL

#### CONTENTS

Advisory

Setup and Installation

Wireless Hand Control

1-3-25 year Warranty

## ADVISORY

Attention: Read the following information before using this product . Failure to use a surge protection device could compromise safety or cause product malfunction could void the electrical portion of your warranty.

Electrical surges are by far the biggest cause of problems with electrical circuits.

In order to help protect your investment in case of a power surge or outage, use an electrical surge protection device (not included).

### WARRANTY WARNING!

Do not open or tamper with the transformer, control box, motors, or remote control (with the exception of battery compartments). The product warranty will be void if these components are tampered with.

### SMALL CHILDREN AND PETS:

Immediately dispose of all packing materials as it can smother small children and pets. Do not allow any person or pets under the bed. Children, convalescents and disabled person should not operate the bed without adult supervision.

### HOSPITAL OR CONVALESCENT USE DISCLAIMER:

Adjustable beds are designed and engineered for a life style of in-home comfort and are not intended for hospital use or for a bed-ridden patient on an extended recovery. Adjustable beds are not equipped with bars to help patients get safely in and out of bed and are not intended to be used around tent type oxygen therapy or explosive gases.

### PACEMAKER WARNING:

The massagers in this bed produce mechanical vibrations that may

paragraph, any mechanical bed base part found to be defective, normal wear and tear or cosmetic damage are excepted. Electronics, electrical components, drive motors and massage motors are also excluded. This limited warranty shall not apply unless the defective part is returned to InnoMax and InnoMax receives all service and transportation cost for verification. In years 2 - 25 years, purchaser shall pay all service and transportation costs related to the replacement of the defective part and required to pay a percentage of the current replacement cost of the parts relative to the number of years in service per the schedule shown above.

### ADDITIONAL TERMS AND CONDITIONS

This warranty does not apply : (a) to any damage caused by the purchaser; (b) if there has been any repair or replacement of adjustable bed base parts by an unauthorized person; (c) if the adjustable bed base has been mishandled (whether in transit or by other means), viz., subjected to physical or electrical abuse or misuse, or otherwise operated in any manner inconsistent with the operation and maintenance procedures outlined in the Owner's Manual and this warranty; (d) to damage to mattresses, fabric, cables, electrical cords or items supplied by dealers. (Contact the dealers for warranty information on those items;) (e) if there has been any modification of the adjustable bed base without prior written consent by InnoMax; (f) to costs for unnecessary service calls, including costs for in-home service calls solely for the purpose of education the consumer about the adjustable bed base or finding an unsatisfactory power connection; (g) if the recommended weight restriction is not followed (refer to the advisory section of this manual), the warranty will be void; (h) to the use of the adjustable bed base in whatsoever and howsoever manner other than the personal in home or motorhome use exclusively by the purchaser.

Repairs to or replacement of an adjustable bed base or its components under the terms of this limited warranty will apply to the original warranty period and will not serve to extend such period. The decision to repair or to replace defective parts under this warranty shall be made, or cause to be made, by InnoMax at its option and in its sole discretion. Repair or replacement shall be the sole remedy available to the purchaser. There shall be no liability on the part of InnoMax for any special, indirect, incidental, or consequential damages or to any other damage, claim, or loss not expressly covered by the terms of this warranty. This limited warranty does not include reimbursement for inconvenience, removal, installation, setup time, loss of use, shipping, or any other costs of expenses, InnoMax and/or its service technicians shall not be responsible for moving furniture or any other items not originally attached to the adjustable bed base in order to preform service on the adjustable bed base. It is the sole responsibility of the purchaser to provide adequate space and accessibility to the adjustable bed base. In the event that the technician is unable to perform service due to lack of accessibility, the service call will be billed to the purchaser and the service will have to be rescheduled. InnoMax makes no other warranty whether expressed or implied, and all implied warranties of merchant ability and fitness for a particular purpose are disclaimed by InnoMax and excluded from this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to every purchaser. This warranty gives the purchaser specific legal rights, and the purchaser may also have other rights, which may vary from state to state. This warranty is valid in all 50 states, Puerto Rico and Canada.

**InnoMax® Adjustable  
Lifestyle PowerBase  
1, 3 & 25 Year Limited Warranty**

InnoMax Corporation (“InnoMax”) warrants this adjustable bed base to the consumer who is the original purchaser of a new product which was not sold “as is” (the “purchaser” ), subject to the terms and conditions set forth herein. This warranty begins on the “warranty commencement date “ which is the date of purchase for new unused beds base.

WARRANTY YEAR	MOTORS	TRANS-FORMERS	CONTROL BOXES	REMOTE CONTROLS
YEAR 1	Parts & Labor*	Parts & Labor*	Parts & Labor*	Parts
YEARS 2-3	Parts	Parts	Parts	65%
YEARS 4-10	75%	75%	75%	75%
YEARS 11-15	85%	85%	85%	85%
YEARS 16-20	90%	90%	90%	90%
YEARS 21-25	95%	95%	95%	95%

\*During the Parts & Labor warranty period, upon verification of defect there will be no charge for replacement parts. During the Parts & Labor warranty period, there will be no charge for preapproved labor services authorized by InnoMax. If repair is needed during the warranty period, the purchaser will be required to produce a sales receipt/proof of purchase evidencing the date of purchase, the amount paid and the place of purchase. If no such sales receipt/proof of purchase is produced, full amount of charges for labor and the parts shall be paid for by purchaser before any services can be rendered.

**FULL 1 YEAR WARRANTY**

This adjustable bed base is warranted against defects in the workmanship or materials for a period of one (1) year from the warranty commencement date. Upon notice during the first year after the warranty commencement date, InnoMax will repair or replace (at no cost to the purchaser) any defective adjustable bed base part with new or refurbished parts, and InnoMax will pay all authorized labor and transportation costs associated with the repair or replacement of any parts found to be defective. When the adjustable bed base at hand is found to be DAMAGED, not DEFECTIVE, all costs incurred to inspect and/or correct the requested issue will be the financial responsibility of the requesting party.

**2-3 YEAR LIMITED WARRANTY**

During the second year from the warranty commencement date, upon receipt of written notice, InnoMax will replace any adjustable bed base part found to be defective with new or refurbished parts. Purchaser shall pay all service and transportation costs related to the replacement of the defective part. This limited warranty shall not apply unless the defective part is returned to InnoMax and InnoMax receives all service and transportation cost receipts for verification.

**25 YEAR LIMITED WARRANTY**

Upon written notice during the 2nd year through the 25th year from the warranty commencement date, InnoMax will replace, upon terms and conditions set forth in this

activate a special sensor in your pacemaker that detects motion. This can fool the pacemaker into “thinking” you are engaged in some sort of physical activity and require a faster heart rate and you may experience a sensation similar to when you are exercising. Consult your physician for further information.

**PRODUCT RATINGS:**

The bed lift motors are not designed for continuous use of more than 2 minutes in an 18 minutes period, or approximately 10% duty cycle. Any attempt to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

**WEIGHT UNITS:**

The limitation for this adjustable bed is 850 lbs. The bed will structurally support these weights, provided it is evenly distributed across the head and foot sections. This product is not designed to support or lift this amount in the head or foot section alone. Exceeding this weight restriction could damage the bed and/or cause injury and void the warranty. Enter or exit the bed in a flat position and do not sit on the head or foot sections while in the raised position.

**LIFTING AND LOWERING MECHANISMS AND MASSAGE UNITS:**

It is normal for the raising and lowering feature on this bed will emit a minimal humming sound during operation. The massage feature creates a vibrating hum during operation and the resonance will increase accordingly with a higher intensity motor setting.

**LOCATION ENVIRONMENT:**

The level of sound experienced in a room is directly related to the environment within that location. In a room with hardwood floors and the massagers turned on, a vibrating noise can be noticeable. To reduce the resonance, place a piece of carpet or rubber casters cups under the legs. The rubber caster cups also prevent the bed sliding when located on smooth or hard surface flooring.

**TO REDUCE THE RISK OF SHOCK, BURNS, FIRE OR INJURY:**

Make sure the base is in a flat position, the vibrating motors are off before unplug from power source. Always unplug the base from the electrical outlet before cleaning or servicing the base. If the cord or plug is damaged, discontinue use of the bed base and contact qualified service personnel for examination and repair.


**FCC COMPLIANCE:**

This device complies with part 15 of the FCC Rules for residential use. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio Frequency: 2.4 GHz

**EMERGENCY BATTERY BACKUP:**

In the event that the base is stuck in an articulated position during a power outage-the battery backup in the transformer will return the base to flat position. Batteries are not to be used for normal operation of the base. Install two 9 volt alkaline batteries into the battery backing transformer. Use the reset button on the control box or the extension cord from the control box to the transformer to return the base to a flat position.

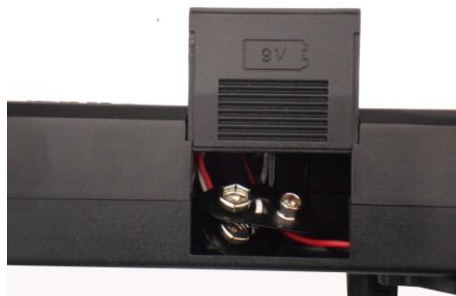

**Wireless Remote  
#QH04R9QH Adjustable  
Bed Base**

**Children Safety Lock and Unlock Buttons**

Press these two buttons simultaneously till Back light flashes to lock and unlock.

**Right Head Button**

Used to raise and lower the right head of the bed base

**Memory Button M1**

**Memory Button M2**

**Right Massage Button**  
Turn the head massage on and off, Adjust massage intensity for the head.

**Timer Button**

Use to set the desired time. Also a stop button when the massage is on.

**Flash Light Button**

Use to turn on and off the flash light .

**Preset Position Buttons**

1. Press to adjust the head and foot to desired position ,then press M1、 M2、 TV、 Anti-Snore or ZG button, the back light flashes confirm the successful setting .
- 2.You can reset the 5 position buttons by repeating the above steps .



**Foot Button**

Used to raise and lower the foot of the bed base

**Left Head Button**

Used to raise and lower the left head of the bed base

**Flat Button**

Press to return to flat position

**Under Light Button**

Use to turn on and off the under light

**Left Massage Button**

Turn the foot massage on and off, Adjust massage intensity for the foot.

**Massage Type Button**

Offer three massage actions : Pulse , Wave& Constant

**For Customer Service call 720-241-0648  
or email us at [sleep@innomax.com](mailto:sleep@innomax.com) .  
Please tell us your name, phone, address,  
serial number (found on foot beam of bed)  
and the issue when you call or email.**

**USING SAME REMOTE**

The bed base is designed to allow two twin X-Long bases to become an Eastern King base and two Split-Cal-King bases to become a Cal-King base. And you can use the same remote to control two side by side beds bases by following Step 7 on the installation guide to synchronize the remote with the two control boxes of the two units.


**SETUP and INSTALLATION**  
**Important: We strongly recommend**  
**Two able-bodied adults setup and**  
**assemble this product.**

**Step 1:**

Check and verify all parts are included before discarding any packing materials.

All electronics and components that need to be installed are located in boxes under the base or attached to the frame.

- A)Wireless Remote Control (1)
- B)Mattress Retainer Bar (1)
- C)Legs 4"+ 7"(6)
- D)Power Cord (1)
- E)Transformer with emergency battery backup (1)
- F)Control Box (1)
- G)Registration Form (1)

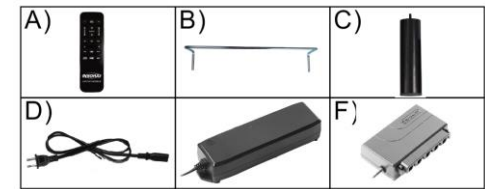

**Step 2:**

With the help of your able-bodied assistant, place carton on floor with arrows point downwards.

**Step 3:**

Connect the Transformer “E” to Control Box “F” : The Control Box is the Black Box attached to the bottom of the bed . Extend the Power Cord from the Control Box “F” and attach to the short electrical output cord on Transformer “E” . Extend the Power Cord “D” and plug it into the Transformer “E” . (See Figure 1)

**USING 2 REMOTE ON SAME BED**


Press the and buttons of a new remote (B)(the one that has not sync with the beds),until the flash light flashing, then release the two buttons, The flash light will be on for 10 seconds. Meanwhile press and buttons of the master Remote (A) , the copying process is successful when the flash light (B) starts to flash. Now both remote control will be able to control both beds to the same position.(See figure 8)



To desynchronize the clone remote(B) from master remote(A) ,press the and buttons of the clone remote(B),the desynchronizing process is successful when the clone(B) flash light normally on.(See figure 9)



Setup is now complete. Enjoy.

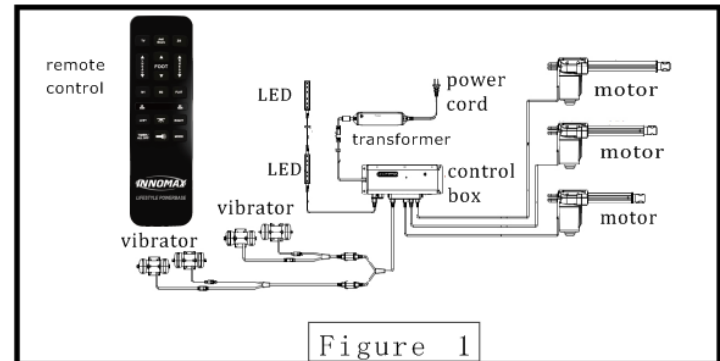

Step 4:

Locate the Wireless Remote control and insert 2 AAA batteries (See Figure 2)

Step 5& 6:

Plug electrical cord into a grounded electrical outlet.

- Using the Wireless Remote, push the Head Up button, Foot Up button and the vibrating motor for a momentary test of the Wireless Remote. If the motor is working quickly let go of the button and skip to step 8.

Step 7:

Synchronize the remote with the control box. First find the black box (control box) mounted in the mid section of the bed. Hold in the **▲** and **▲** on the remote control, then press the RESET button(See Fig.3) on the side of the control box or on the extension cord, you will hear some quick Beeping sounds. The adjustable bed should be working after matching the remote with the control box. Press the Head Up button to test. The RESET button also can be used as emergency lowering to flat the bed base, when press once, it adjusts bed to the level position.



Figure 2

Figure 3

Step 8:

-Unplug the Power Cord.

-Install the six legs firmly into the base of the frame. The legs screw into the threaded holes in each corner of the adjustable base frame (See Figure 4).The legs are stackable. The combination give you a set of six 4", 7"or 11"legs.Note: The minimum leg height:4",the warranty is void if the minimum leg height is not used.

-Do not over tighte



Figure 4

Step 9:

With the help of your able-bodied assistant, carefully lift the adjustable bed frame and set it in place upright on its legs. Excessive pressure may damage the legs. Remove all protective plastic covering. Note: check and make sure that all power cords clear and do not interfere with any Adjustable Bed Mechanisms; Dispose of covering property to avoid injury.

Step 10:

Note : The Mattress Retaining Bar is mounted upside down for shipping only. Remove the Mattress Retaining Bar on the foot of the bed and turn the bar upright and reinstall by carefully aligning and pushing the bar into place. Inset the retaining clips to secure the bar into place. (See Figures 5 & 6.) The retaining bar is to prevent the mattress from slipping out the base and should not be used as a handle of the base. Using as a handle will damaged the retaining bar holders. Screws come out from the retainer bar holders will be considered as a damaged part and not a defective part and is not covered by the warranty.



Figure 5

Figure 6