




48

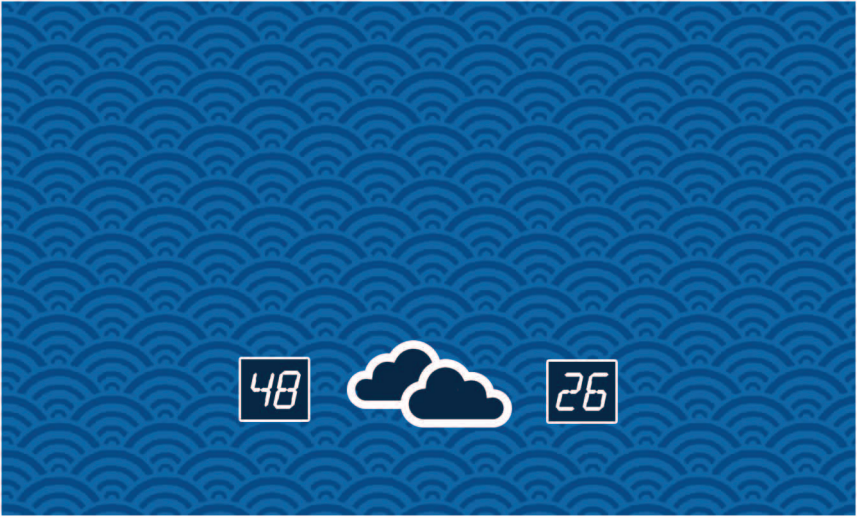

26

DIGITAL AIR SLEEP SYSTEM OPERATING INSTRUCTIONS

FEATURING THE FREEDOM-AIR™ IN-RAIL INFLATOR

4826

DIGITAL SLEEP APP DOWNLOAD



Control your comfort level with our Digital Sleep app for Apple or Android



Download on the
App Store

<https://apps.apple.com/us/app/digital-sleep/id6476977452>





GET IT ON
Google Play

https://play.google.com/store/apps/details?id=my.digital_sleep


4826

FREEDOM-AIR INSTRUCTION VIDEOS

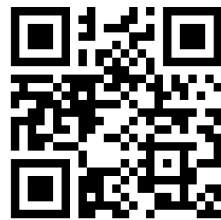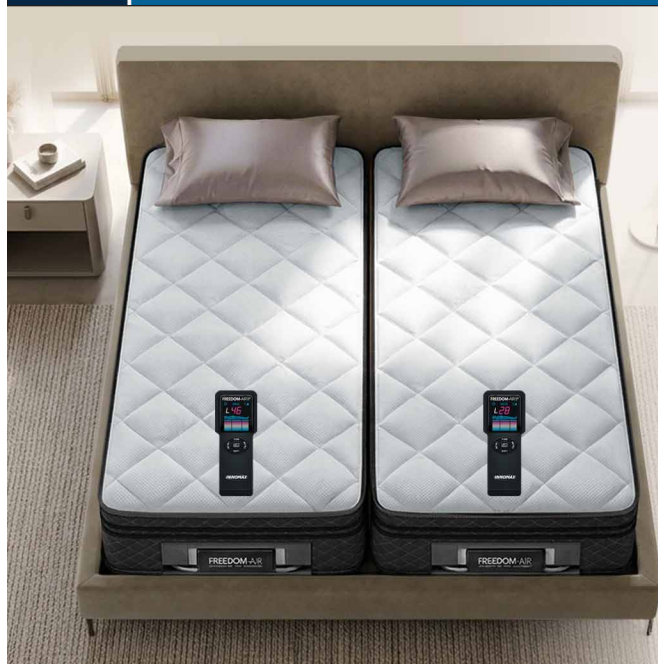

**Freedom-Air In-Rail
Inflator Operating
Instructions**

<https://vimeo.com/1222155294>

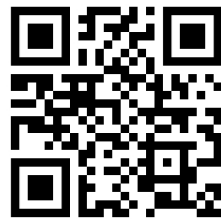

**Freedom-Air Operation w/
Your Split King or Split
California King Mattress**

<https://vimeo.com/1222160163>

Digital Air Sleep System Components:

Mattress is pre-assembled. No assembly required.

- Mattress Cover/Pillow Top Enclosure
- Comfort Layer
- Air Chamber(s)
- Power Edge Support Rail System (Head/Foot Rails Set & Side Rails Set)
- Freedom-Air In-Rail Inflation System
- Foundation(s) (Optional)




Position Bed To Desired Location:

Determine where your bed will be positioned & assemble your support frame. This can be a metal bed frame, a platform pedestal or Versaleg™ bed leg system.

Assemble the support frame in the desired location and place your foundation in the frame with the open side down. Many platform pedestals don't require the use of a foundation.

For Versaleg™ assembly, place the foundation(s) on the floor with the open side up. Position the Versaleg™ plates on all four corners of (each) foundation and then place one plate on each side approximately half way between the head and foot plates. Use the four screws provided to attach each plate to the foundation.

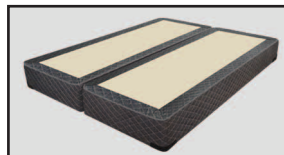

Once the plates have been secured, twist the threaded end of the Versaleg™ into each plate. Once all have been inserted, simply flip the foundation over so the legs rest upon the ground and you have the firm, flat side of the foundation facing up. You are now ready to turn on your Digital Air Bed system.

Your Freedom-Air™ Mattress Is Pre-Assembled:

Your Freedom-Air™ mattress is pre-assembled. No assembly required. The Comfort Layer, Air Chamber(s), Power Edge Support Rails & Freedom-Air™ In-Rail Air Inflation system - are pre-installed in your mattress. Freedom-Air™ features a quiet, powerful, compact & integrated space saving design. This air inflator is housed in the power edge foot rail, eliminating unsightly hoses, connections & any issues with problematic pump placement. The pump placement also helps eliminate any possible issues with dust, debris or pet hair that often render other air inflators ineffective. **2**

Operating Your Freedom-Air™ In-Rail Air Inflator:



Step 1 - Plug In The Pump:

use of a surge protector is recommended. The power indicator will flash slowly for 30 seconds and then stops flashing which means the system is in standby mode. The power indicator will flash when the pump is working. If the remote shows “ER” for error, re-sync control (see troubleshooting tips).



Step 2 - Press Any Button To Light LCD For Operation:

If there is no operation after 15 seconds LCD will turn off automatically to save battery life.



Step 3 - Left/Right:

Press “LEFT/RIGHT” button to select left or right side air chamber for further operation. LCD will show “L” or “R” accordingly.



Step 4 - Inflation Of Air Chamber - FIRM:

Press “FIRM” button for one time, the pump will be activated to inflate and the pressure level shown on LCD will increase relative to pressure in air chamber, and scroll bar will scroll up to show that the pressure is increasing. At any time during the period of inflation, pressing any button will stop the inflation. Or when the pressure reaches the maximum 50 on LCD, the inflation will stop automatically.



Step 5 - Deflation Of Air Chamber - SOFT:

Press “SOFT” button, the pump will be activated to deflate and the pressure level shown on LCD will decrease relative to pressure in air chamber, and scroll bar will scroll down to show that the pressure is decreasing. At any time during the period of deflation, pressing any button will stop the deflation. Or when the pressure reaches the minimum (“0” on LCD), the deflation will stop automatically.



Step 6 - Activating Memory Setting:

Press “MEM1” or “MEM2” button, LCD will show “M1” or “M2” and the pump will be activated to inflate or deflate until the pressure in air chamber reaches the level memorized. When the pump is inflating or deflating to the level memorized, pressing any button will still stop inflation or deflation.



Step 7 - Setting Memory Level:

When LCD shows a pressure level readout, before or after inflation or deflation, press and hold “MEM1” or “MEM2” button for 3 seconds, M1 or M2 indicator will flash and the current pressure level will be kept as a new memory level. The memory level for left or right side air chamber can be set in the same way, to be same or different. The default MEM1 level is 25 on LCD. The default MEM2 level is 20 on LCD.



Step 8 - Smart Support Technology (SST):

SST is enabled by default to maintain level last selected or memory setting for continuous comfort. SST may be disabled/enabled by pressing “LEFT/RIGHT” for 3 seconds then, while still pressing “LEFT/RIGHT” button, quickly pressing “FIRM” button at which time LCD will display F1, at this time pressing “LEFT/RIGHT” will turn SST off or on. When disabled SST symbol will not show in the LCD display.



Split King/Split California King Components:

Mattress is pre-assembled.
No assembly required.

- 2 Separate Mattresses
- 2 Separate Air Inflation Systems
- 2 Separate Air Controls
(One Control For Each Mattress)



Things You Should Know Before Using Your Freedom-Air™ Inflator:

All the mattress components (Comfort Layer(s), Air Chamber(s), Power Edge Support Rails & Freedom-Air Inflation System(s)) come pre-installed in your mattress. Each mattress has it's own Freedom-Air inflation system located in the foot rail.



Each mattress also has it's own remote control so you can adjust your own side of the bed.



Please remember: Your individual remote control only controls your side of the bed. It **will not** control your partner's side of the bed.




Please Note: The remote controls you receive are always defaulted to the left side


You will also see the letter 'L', indicating the left side is selected. The reason the remote controls are defaulted to the left side, is because only the left side air hose on both air inflators is hooked up to the air chambers.



Please Note: Again, the remote controls you receive, are always defaulted to the left side, and anytime the left/right button is pressed, the remote will toggle between LEFT & RIGHT side of the air inflator on the inside of the bed.

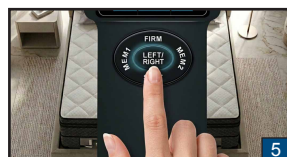

Please Note: If your remote control reads “0”, “R” - on either control, you will not be able to control the air inflation level inside your mattress.

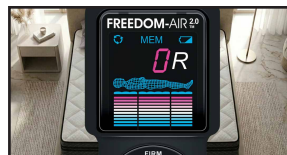


It means the left/right button has been advertently pressed and you will need to press it again - to go back to LEFT side, to control the firmness of your mattress.



Note: If You Wish To Change One Of The Remote Control's Settings From Left To The Right Side


If you wish to change one remote control setting from Left to the Right side and have it work correctly, you first need to change the remote control setting.

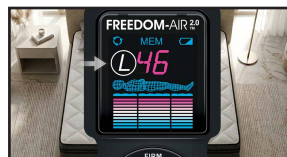

Press the left/right button - so the setting changes to the Right side.




Your control is now switched to the Right side, indicated by the “R” on the LCD display. At this point you will notice a “0” reading on the LCD.

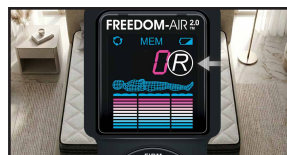

You must then access the air inflation hose inside the foot of the bed - by unzipping the cover, and switching the hose from the left side -



over to the right side of the air inflator. This will now allow your remote control that is set to the right side, to now correctly control your air inflation level.

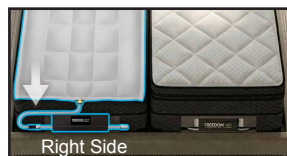

Now you will have one control that is set to Right side and one control that is set for Left side and will be able to control your inflation level on your side of the mattress.





SST™ SMART SUPPORT TECHNOLOGY

FEATURING

IPS™ INTEGRATED PRECISION SENSING

FOR RELIABLE NUMERIC ACCURACY • ASSURES YOU OF YOUR CHOSEN SUPPORT & COMFORT THROUGHOUT THE NIGHT

1 Smart Support Technology (SST)

2 Memory 1

3 Left

4 Pressure Scroll Bar

5 Memory 1

6 SOFT

7 Transparent Control Stand(s)

8 Battery Capacity

9 Memory 2

10 Right

11 Pressure Level

12 FIRM

13 Memory 2

14 LEFT/RIGHT


Digital Air Inflators: Only one control operates at a time.

ISSUE	INFORMATION OR SUGGESTED ACTION(S)
Caution	1) The Digital Air Sleep System MUST BE acclimated to room temperature for 24 hours prior to attempting to operate. Failure to do this may result in the Digital Air Sleep System not functioning properly.
Inflator Pump Not Powering Up	1) Use of a surge protector is recommended. 2) Make sure the electrical outlet is working & any appropriate light switches are turned on. 3) Make sure the surge protector is plugged in, reset to operate and that the power switch is turned on. 4) Unplug the pump from the power supply & plug it back in allowing the system to reboot. *If pump is still not working properly, contact authorized dealer for replacement.
Buttons	1) On startup, buttons may need to be pushed more than once as inflator calibrates to the sleep system.
Range	1) Wireless remote control range is 15 to 30 feet, if out of range - controller will show "ER".
Sync	1) While remote is synced before delivery, if "ER" continues to show on LCD please re-sync. 2) To re-sync, disconnect power to the pump, then power it on again. Within 30 seconds while power indicator is flashing, press any button to light the LCD. Then press "FIRM" button for 3 seconds, will start the re-sync. The LCD will display "SU" when the pump and the remote are synced again successfully and enter the standby mode. 3) If remote does not sync after a few attempts, remove the batteries for 1 minute, and after replacing - try the sync process again.
Batteries	1) The remote is powered by 3 AAA batteries. The LCD will show low battery capacity alert when it is time to replace the batteries. Please remove the batteries if the inflator will not be in use for a long period of time.
The Digital Readout On Hand Control Will Vary	1) Depending on many external factors such as temperature changes, exposure to direct sunlight and temperature changes with or without the sleeper.
Readings May Vary When Lying In Different Positions	1) ie: laying on your side versus your back or stomach.
Digital Readout Will Fluctuate During Inflation and/or Deflation	1) Once the button is released, briefly touch the button once and the control and inflator will synchronize. The reading will then reflect the realtime pressure setting.
Readouts Will Differ When Somebody Is On The Bed VS Not On The Bed	1) Check readout at night and again the next morning while lying in bed for at least 2 nights without making any changes to the sleeping conditions to verify a significant change in readout. If a significant number difference (such as 10) is noticed under consistent circumstances, contact an authorized dealer for replacement or online at: Warranty Claim Form: www.innomax.com/warranty-claim-form/ Customer Service Dept: 1-800-InnoMax (466-6629)

THIS DIGITAL AIR SMART SLEEP SYSTEM FEATURES:


48 SST 26 SMART SUPPORT TECHNOLOGY™

FEATURING

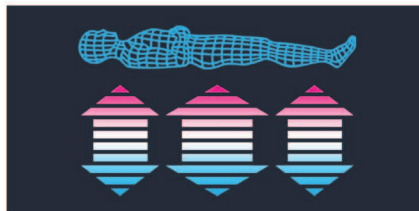

ASSURES YOU OF YOUR CHOSEN SUPPORT & COMFORT THROUGHOUT THE NIGHT

WORRIED ABOUT IMPRESSIONS? THEY'RE NORMAL!

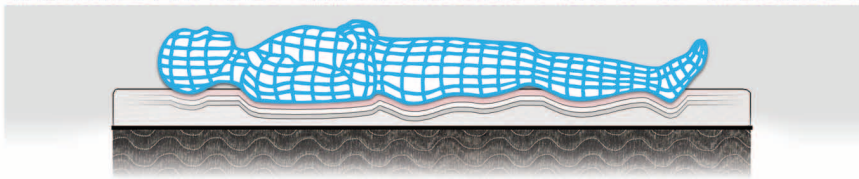

Today's top-quality mattresses use technologically advanced foams & fibers that are designed to be softer & more comfortable while ensuring your body has the support you need for good health.

These materials provide comfort and proper support by conforming to your unique body shape to help reduce pressure.

In the first few weeks you sleep on a new mattress that offers these extra comfort layers, you may notice body impressions or a mild "dip" on the mattress surface. Many people mistake these impressions

or "dips" as a defect in the mattress (i.e. sagging). This is not a defect in the mattress. These body impressions are normal & shouldn't be considered a sign that something is wrong with your new mattress. It is the foam & fibers compressing and conforming to your body.

Body impressions are clinically proven to help support spinal alignment & provide the pressure relief needed for a great night's sleep. A good body impression enables the bed to cradle your sleeping form gently to provide optimal comfort and posturizing support.

48

26

**STILL NEED HELP WITH SET-UP
PLEASE CONTACT US AT:**

1-866-879-1994

www.innomax.com

info@specialtysleepservices.com



DIGITAL AIR SUPPORT

www.innomax.com
1-800-INNOMAX